

# Installationguide REVESTINO



## **Short Description:**

Due to its shape, the profile is suitable for both facade and ceiling installation. A visible screw connection is used here. We recommend the use of self-drilling screws or pre-drilling. Small black foxing, water stains, lime edges, flying mold and the like are external weathering influences of nature and cannot be prevented. You can minimize any marks that may appear on the material by regular cleaning and care. The care instructions for bamboo must be observed.

## **Installation:**

The first step is to attach a substructure to the ceiling. The distance between the substructure must not exceed 500mm. Direct mounting on the ceiling substructure is also possible. We always recommend the use of a substructure.



The Revestino profiles are used without a clip, therefore screwed directly. The screwing is done in the middle of the substructure. The use of stainless steel screws is recommended. In order to generate the appropriate distance, we recommend the use of spacers of appropriate thickness. The same applies to mounting as a facade.

**Please follow the care instructions for bamboo. We recommend treatment with aMbooo care oil after installation. Incorrect treatment will reduce the life of the deck. Cut edges must be treated with the aMbooo care oil and additionally with end edge wax.**


If you are not familiar with the use of this product and in particular with its intended use, please contact us.

## **View:**

### Detail front view:

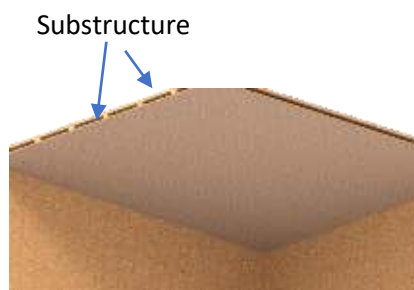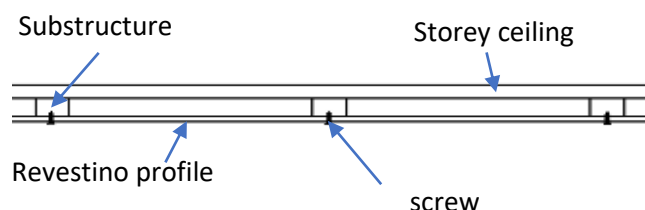

### Detail side view:

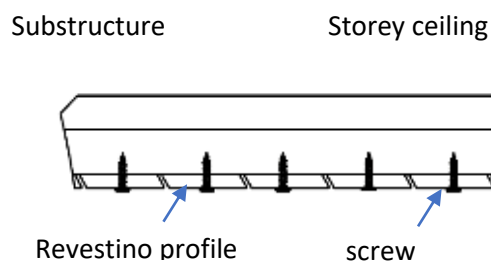

aMbooo  
Bamboo care oil



aMbooo  
Face edge wax

