

Installation Guide

SIGNATURE CLADDING

Short Description:

The Facade profile is mounted with our facade clip-EU. The distance between the fixing points must not exceed 400mm. Depending on the building structure, the clip can be used directly or with a substructure. We always recommend the use of a substructure as this allows unevenness to be compensated. For the static calculation, the dead weight must be taken into account. 1sqm -> 15kg. Small black mildew stains, water stains, lime scale, mildew and the like are external weather influences of nature and cannot be prevented. You can minimize any marks that may appear on the material by regular cleaning and care. The care instructions for bamboo must be observed.




Installation:

The installation of the Signature profile 12mm begins with the attachment of the substructure to the building wall. This can consist of simple roof battens, which are at least 40 mm wide.



The next step is to position the first row of clips. One screw per clip is sufficient. A clip is positioned every 535mm, centered on the substructure. For this purpose, the use of a spirit level is recommended. The first board is then placed. The next row of clips can be placed on the first board and screwed tight. A distance from the previous plank is not necessary. This is then repeated up to the penultimate board.

The last board must be sawed to fit. At the top visibly put a screw to fix the profile.

In case of head joints of the facade elements, it is necessary to work with a double substructure if the substructure is narrower than 60mm. In case of a substructure ≥ 60 mm, two clips can be screwed onto one substructure. Accurate work is required. The distance between the planks at the head joint, must be at least 2mm.

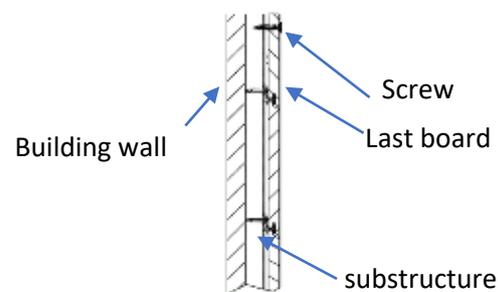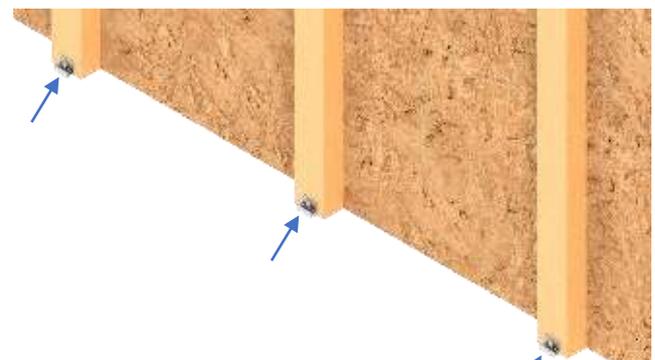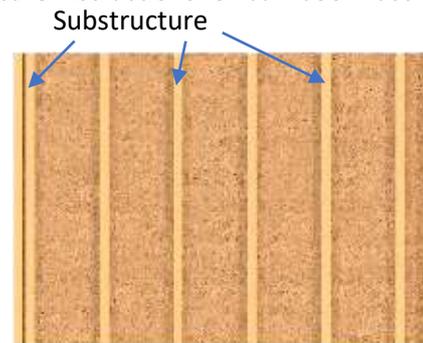

Substructure 60mm +

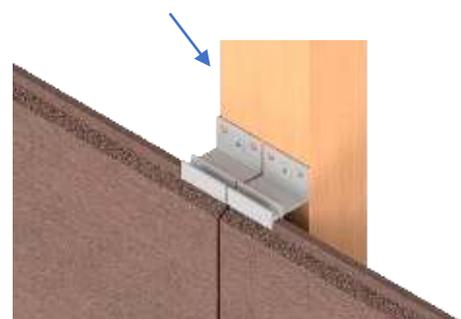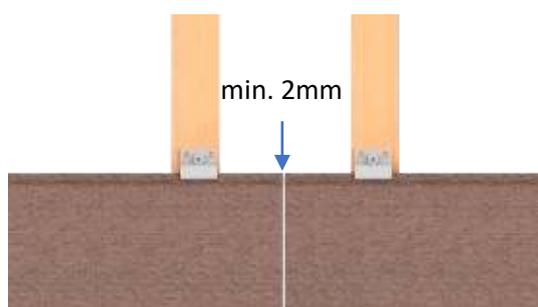

The façade profile may protrude a maximum of 50 mm beyond the end of the substructure at the end of the façade.



Please follow the care instructions for bamboo. We recommend treatment with aMbooo care oil after installation. Incorrect treatment will reduce the life of the deck. Cut edges must be treated with the aMbooo care oil and additionally with end edge wax.



aMbooo
Bamboo care oil



aMbooo
Face edge wax

If you are not familiar with the use of this product and in particular with its intended use, please contact us.

Top View:

